

**ISTRUZIONI DI MONTAGGIO**  
**KIT CUPOLINO**  
**HONDA CB1000 R '08**  
**HONDA HORNET 600 2011**



**HN1300**

**KIT KIT**


- x1 Plexiglass
- x1 specific bracket A+B (4 pieces)
- x2 thickness h 13
- x2 Screw 8x45
- x4 rubber washers
- x4 "round head" screw 5x12
- x4 washers in teflon diameter 5
- x4 special bush
- x2 "squadre shape" screw diameter 6
- x4 washer diameter 6 large
- x2 autolock nut diameter 6

[WWW.BARRACUDAMOTO.IT](http://WWW.BARRACUDAMOTO.IT)

- 1** To mount the bracket to the windshield/screen:  
Mount the special bush on the rear side of bracket, put the rubber washer between the plexi-glass and the bracket, screw the windshield/screen with the "round head" screw 5x12 using the washers in teflon diameter 5

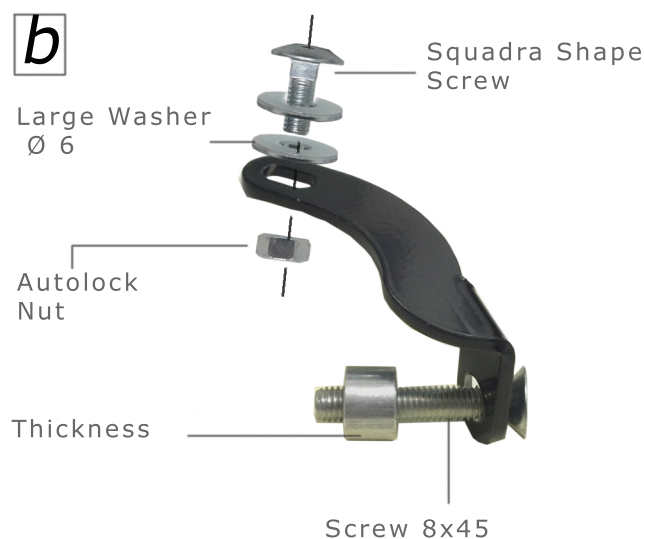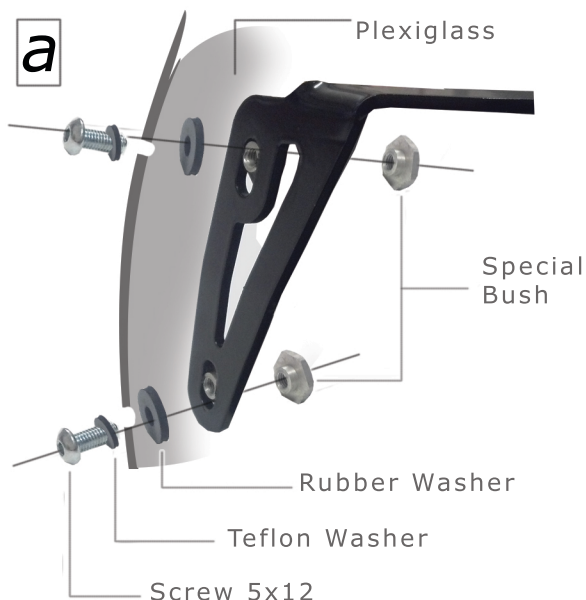

- 2** Remove the fixing screw from the upper steering plate, insert the thickness high 13 into the hole of steering plate, mount the B specific bracket using the 8x45 screw. Don't lock
- 3** Mount the windshiled/screen completed with bracket on the "B" stirrup mounted before. Use the large washer and the autolock nut like shown in the picture. Find the ideal position and lock all the screws

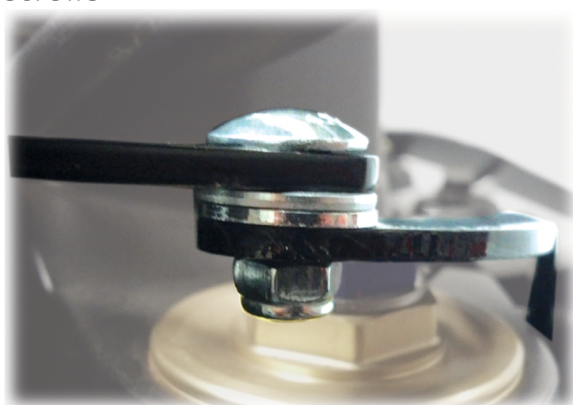

Mount the windshield/screen on the bracket (picture 1). Remove the fixing screws of steering plate, insert the thickness high 13 into the screw position, approach the "B" stirrup and insert the 8x45 screw (picture 2). Don't lock. Mount the windshield/screen with the bracket mounted before on the "b" stirrup using the "squadre shape" screw diameter 6, the washers and the autolock nut (picture 3). Find the ideal position of windshield/screen and than fix all the screws