



B6 LED Brake Light

DNL.B6.003

Thank you for choosing DENALI

We know you would rather be riding your bike than wrenching on it, so we go the extra mile to make sure our instructions are clear and as easy to understand as possible. If you have any questions, comments, or suggestions don't hesitate to give our gear experts a call at 401.360.2550 or visit WWW.DENALIELECTRONICS.COM

Please Read Before Installing

DENALI products should always be installed by a qualified motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. DENALI takes no responsibility for damages caused by improper installation. **Caution:** When installing electronics it is extremely important to pay close attention to how wires are routed, especially when mounting products to the front fender, front forks, or fairing of your motorcycle. Always be sure to turn the handlebars fully left, fully right, and fully compress the suspension to ensure the wires will not bind and have enough slack for your motorcycle to operate properly.


Installation Tips

We strongly recommend using medium strength liquid thread locker on all screws, nuts, and bolts. It is also important to ensure that all hardware is tightened to the proper torque specifications as listed in your owner's manual. For included accessory hardware please refer to the default torque specifications provided below. Inspect all hardware after the first 30 miles to ensure proper torque specifications are maintained.

Bolt Size	in-lbs	ft-lbs	Nm
M3	10.0 in-lbs	-	1.0 Nm
M4	23.0 in-lbs	-	2.5 Nm
M5	44.5 in-lbs	3.5 ft-lbs	5.0 Nm
M6	78.0 in-lbs	6.5 ft-lbs	9.0 Nm
M8	-	13.5 ft-lbs	18.0 Nm
M10	-	30.0 ft-lbs	41.0 Nm
M12	-	52.0 ft-lbs	71.0 Nm

Hardware Sizing Guide

Not sure what size bolt you have? Use this ruler to measure screws, bolts, spacers, etc. Remember, the length of a screw or bolt is measured from the start of the "mounting surface" to the end of the screw, so only include the screw head when measuring countersunk screws.

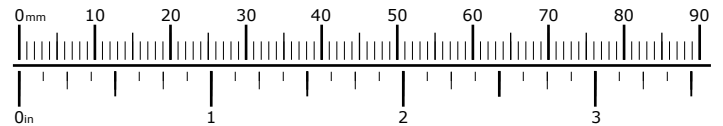

Whats In The Box?




Kit Contents

- (a) B6 LED Brake Light Pod.....Qty 1
- (b) Wiring Pigtail.....Qty 1

Tools Required

Voltmeter/Multimeter

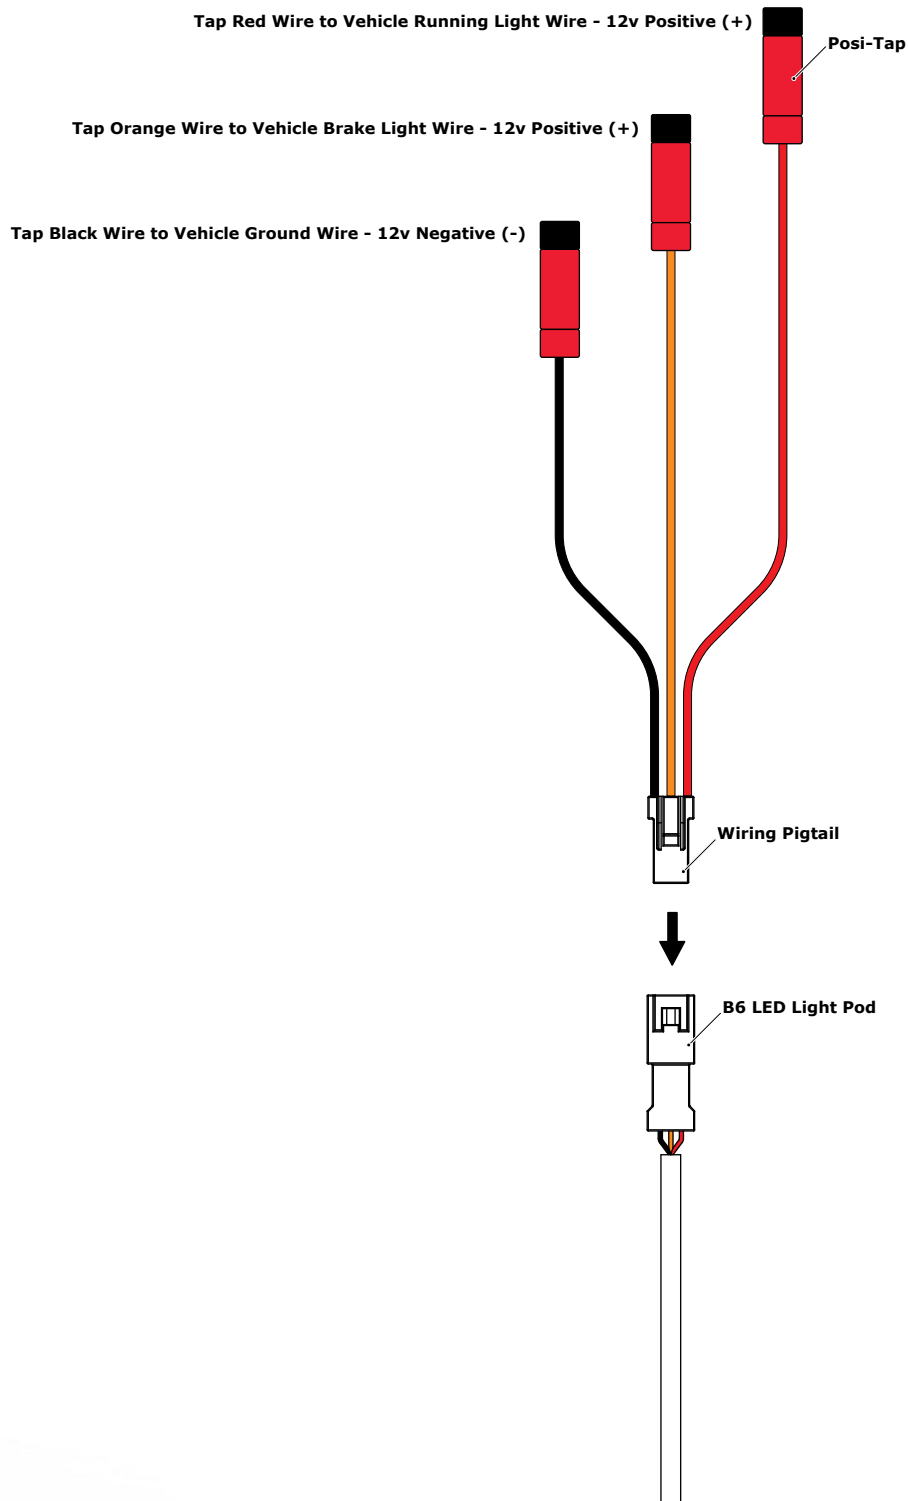

1.1 - Identifying Vehicle Brake Wires

Note: If you are using the B6 Brake Light in conjunction with the DENALI CANsmart Controller, please refer to the instruction manual of the CANsmart Controller for brake light wiring.

Step One: Route the cable from the B6 Brake Light (a) into the rear of the motorcycle to the area the factory brake light is located.

Step Two: Identify the wires coming from the factory tail light. There will typically be only three wires exiting the factory brake light housing. You will need to identify the Running Light Wire, Brake Light Wire as

1.2 - Wiring The Pigtail

well as the Ground Wire. Use a voltmeter or multimeter to assist in identifying the correct wires.

Step Three: Use Posi-Tap connectors to wire the Pigtail (b) to the wires identified in Step Two.

- Tap the Red Wire to Vehicle Running Light Wire
- Tap the Orange Wire to Vehicle Brake Light Wire
- Tap the Black Wire to Vehicle Ground Wire

Step Four: Plug the Pigtail (b) into the connector on the B6 Brake Light.